

OPERATING THE APPLIANCE

This induction cooktop is able to make many kinds of cuisine having high thermal efficiency and being safe and easy to clean.

Putting a pot on the appliance



Put the pot with food/liquid on the cooking zone. Make sure the air inlet and air outlet are not blocked and there are no metallic objects close to the appliance.

Turning on the appliance

Connect the power cord to a power outlet, the buzzer will sound and the power indicator will flash. When the power control is pressed,


For model : ETD29PKB , ETD29PKR

Selecting function

When the appliance is in standby mode, press the " " button or the " " button enter the function mode. when the buzzer sounds and the power indicator lights up, the appliance will start heating.


Hot pot function

The default power level is 1600W, default timer is 2 hours. You can adjust the power level between 120W to 2000W by pressing the "+" or "-" button.

The timer adjust between 30 minutes to 3 hours by pressing the " ", then press the "+" or "-" for desired time

Keep warm function


The default power level is 120W, default timer is 2 hours. You can not adjust the power level in the keep warm mode.

The timer adjust between 30 minutes to 3 hours by pressing the " ", then press the "+" or "-" for desired time

For model : ETD29KC

When the appliance is in standby mode, press the "+" button or the "-" button enter the heating mode. when the buzzer sounds and the power indicator lights up, the appliance will start heating.

The default power level is 1600W, default timer is 2 hours. You can adjust the power level between 120W to 2000W by pressing the "+" or "-" button.

The timer adjust between 30 minutes to 3 hours by pressing the " ", then press the "+" or "-" for desired time

Setting the timer

When the appliance is heating, press the timer control to activate the timer mode. The LED will flash and display "0:30", indicating the timer mode has been activated.

Increase (Decrease) the timer by 1 minute by pressing the "+" (" -") button once. If you hold the press of the "+" (" -") button longer, the time will increase (decrease) quickly by 10 minutes.

The range of the timer is **between 30 minutes to 3 hours**. After you have set the desired time, which is shown in the LED display, the LED will flash for 5 seconds before the countdown will commence. Press the timer button again to cancel the timer function.

If you wish to reset the time during the countdown, first press the timer control, then press "+" (" -") button to adjust the time.

The power level can also be reset during countdown by pressing "+" (" -") button to adjust the power level.

When the time is completed, the buzzer will sound and the appliance will automatically switch off.

For security purpose, if no time applied, the appliance turns itself off after a default time of 2 hours.

Lock the appliance

Press both "+" "-" buttons simultaneously to lock the setting of the appliance. Child lock indicator lights up.

Press and hold "+" "-" buttons for 3 seconds will de-activate the lock function. Child lock indicator lights off.

Turning off the appliance

Press the power control button and the induction cooktop will stop heating. The fan will run for a while to cool down the induction cooktop.